

From Peugeot & Allied Mobility

inspire™

BRAND
NEW

inspire™



Allied Mobility™
Driving for Perfection

Our New Drive From WAV





Contents



- 4** Introducing Inspire™
- 9** What is a Drive From WAV?
- 10** What is an Upfront Passenger?
- 14** Drive From Vehicle Features
- 16** Vehicle Features
- 20** Technical Specification
- 23** Help & Advice

Visit alliedmobility.com/eu

Introducing *Inspire™*

Discover a renewed sense of freedom with our brand-new Drive From wheelchair accessible vehicle, Peugeot *Inspire™*, available exclusively from Allied Mobility.

Based on the Peugeot Rifter and coming in the impressive Allure Premium specification as standard, which includes top of the range features such as a colour reversing camera, *Inspire™* makes independent travel possible for wheelchair users.

With one-touch automatic tailgate and wheelchair ramp release, *Inspire™* is designed to ensure you can easily enter the vehicle in your manual or powered wheelchair to the driver or upfront passenger position without assistance from a fellow traveller. *Inspire™* lets you go where you want, when you want.

Email: int@alliedmobility.com









- 1 » Reliable, powerful & sleek design
- 2 » One-touch automatic tailgate open
- 3 » One-touch automatic wheelchair ramp release
- 4 » Colour reversing camera
- 5 » Parking sensors to help you manoeuvre
- 6 » 3-year/60,000 miles Peugeot warranty





What is a Drive From WAV?

A Drive From WAV (DFW) is a specially designed vehicle which enables you to drive from your wheelchair. By removing and stowing the original driver seat, space is created for your manual or powered wheelchair.

Using a handy key fob, your tailgate is opened automatically which releases your low-gradient wheelchair ramp, allowing you to enter your Drive From WAV safely from the rear of the vehicle. Once inside, you'll find superb visibility and an automatic safety system to secure your chair in place.

If you've just started looking at cars you can drive in a wheelchair, it's good to get expert advice. At Allied Mobility, our trained and friendly mobility partners can talk you through how to personalise your *Inspire™* to ensure you have a safe and comfortable drive.



@Allied Mobility International

What is an Upfront Passenger?

If you don't plan on driving and you would prefer to travel in the upfront position alongside the driver in your wheelchair, *Inspire™* is the choice for you.

With the original Peugeot front passenger seat easily removed, a wheelchair or powerchair can enter by the rear access ramp and move right up to the forward position. An independent automatic safety system or four-point tie downs can be used to secure your chair in place, alongside a full lap and diagonal seatbelt, ensuring a safe and comfortable journey.

Visit alliedmobility.com/eu





- 1» One-touch key fob
- 2» Internal ramp/tailgate release and close
- 3» Air suspension to lower the WAV for easy low-gradient ramp entry
- 4» Personalised hand controls and driving aids



1



2



3







Drive From Vehicle Features

- 1 » Suitable for powerchairs and wheelchairs, and mobility scooters for internal transfer layout
- 2 » High quality wheelchair restraints
- 3 » High quality docking station

Vehicle Features

Brand-new *Inspire™* is a modern WAV with a stylish base vehicle, brimming with exciting features for your comfort and safety.

What's more, this latest addition to our range comes in Allure Premium spec as standard. This means you can enjoy additional user benefits including colour reversing camera, parking sensors, electric parking brake and PEUGEOT i-Cockpit® 8" colour touchscreen with in-car entertainment system, which mirrors your Apple or Android smart phone. There's also a stylish body-coloured front bumper and Taranaki alloy wheels to finish the sleek look of the all-new *Inspire™*.

Email: int@alliedmobility.com










- 1» i-Cockpit® touchscreen with in-car entertainment
- 2» Air conditioning
- 3» Automatic transmission
- 4» Cruise control & speed limiter
- 5» Steering-wheel mounted audio controls
- 6» 16" Taranaki alloy wheels
- 7» LED daytime running lights
- 8» Power folding, door mirrors

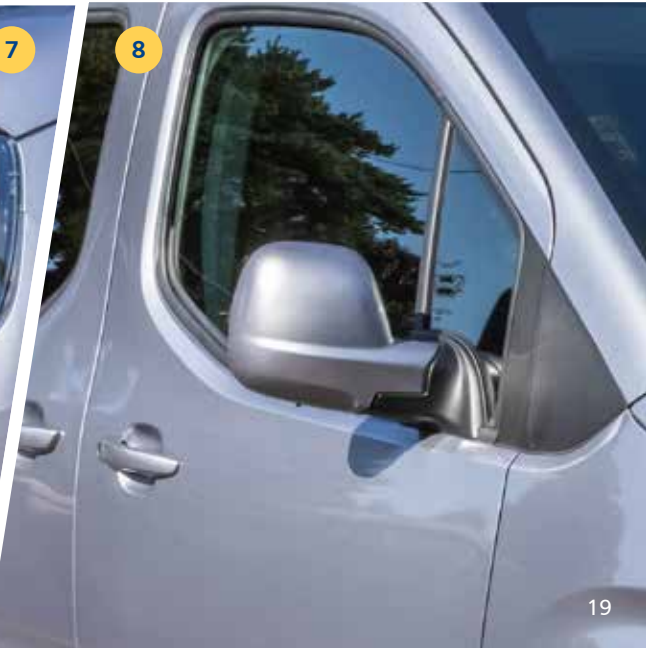

Technical Specification

Model	1.2 PureTech 130 Auto
Engine	
Emission control standard	Euro 6d-ISC
Cubic capacity	1,999
Max. power - PS	131
Max. torque - Nm	230
Fuel	Petrol
Start & Stop technology	Yes
Transmission	
Number of gears	8-speed auto
Fuel	
Capacity (litres)	50
Weight (kg)	
Gross vehicle weight	2,280
Tyres	
Size	215 / 65 R16
Puncture system	Puncture resistant tyre sealant system
Brakes	
Front & rear discs	Ventilated front & rear solid discs
Suspension	
Front	Pseudo MacPherson
Rear	De-formable Crossmember

Dimensions


Vehicle Dimensions

Length (mm)	4,753
Width (mm)	2,107
Height (mm)	1,882

Wheelchair Entry via Ramp

Width x length x height (mm)	784 x 1,755 x 1,402
Angle when unfolded on to road (°)	10.7
Safe working load (kg)	400

Seating Layout

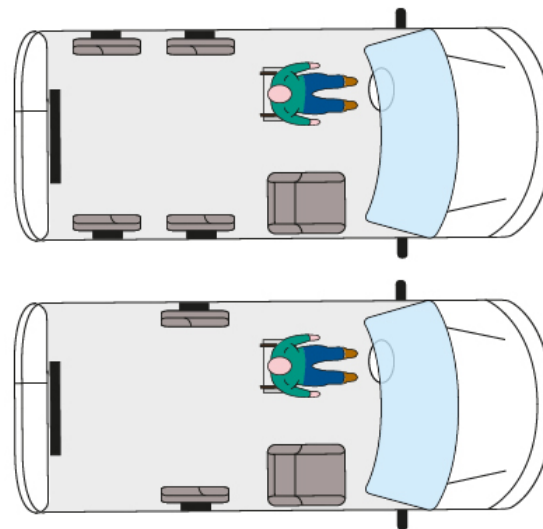

Inspire™ layouts are also available to travel in your powerchair / wheelchair as an Upfront Passenger.

Features & Accessories

Accessibility and Style Features

Automatic tailgate	✓
Automatic wheelchair ramp	✓
Lowering suspension	✓
Personalised adaptations and driving aids	O
Body coloured front bumper	✓
16" Taranaki alloy wheels	✓
Daytime running LED lights	✓
Electric parking brake	✓
Picasso blue interior ambiance	✓
Power folding, heated door mirrors	✓

Safety & Security

Colour reversing camera	✓
Rear parking sensors	✓
Privacy glass	✓
Three point seat belts (including wheelchair passenger)	✓
Driver & front passenger airbags	✓
Front & rear curtain airbags	✓
Automatic door locking when moving off	✓
Automatic hazard light activation upon heavy brake application	✓
Safety Pack: Lane keeping assist, speed limit recognition & active safety brake	✓
Cruise control & speed limiter	✓
Visibility pack: Automatic MagicWash® windscreen wipers	✓
'Follow me home' headlamps	✓

Comfort & Convenience

Electric front & rear windows	✓
USB ports	✓
Air conditioning	✓

Audio and Entertainment

PEUGEOT i-Cockpit® 8.0" colour touchscreen	✓
Mirror Screen® (Apple CarPlay™, Android Auto and MirrorLink®)	✓
Voice recognition (radio, navigation & telephony) linked to Mirror Screen® features	✓
6-Speaker radio, MP3 compatible	✓

Colours



Colours for illustrative purposes only.

Certification

Base Vehicle	Peugeot Rifter
Vehicle Approval	Individual Vehicle Approval
Access Approval	*PAS 2012 for M1 wheelchair accessible vehicles

*PAS (Publicly Available Specification) 2012-1:2012 is a wheelchair accessible design standard developed according to guidelines set out by the British Standards Institute (BSI).

Key

✓ = Included O = Optional





Help & Advice

Allied Mobility is the Europe's leading wheelchair accessible vehicle manufacturer. With over 20 years' experience and thousands of satisfied customers, our goal is finding the best solution to meet your particular needs.

Across Europe, Allied Mobility's vehicles are available exclusively from our appointed distribution partners. Each partner is carefully selected, based on their ability to meet the needs of disabled people and their families.

Should you have any queries before or after ordering your wheelchair accessible vehicle, contact your local distributor at any time for expert advice and information. You'll also have access to a nationwide network of Peugeot dealers.

Email: int@alliedmobility.com

For further information or to arrange a demonstration email us or visit our website.

 int@alliedmobility.com

 [www.alliedmobility.com/eu/
car/peugeot-rifter-inspire/](http://www.alliedmobility.com/eu/car/peugeot-rifter-inspire/)

